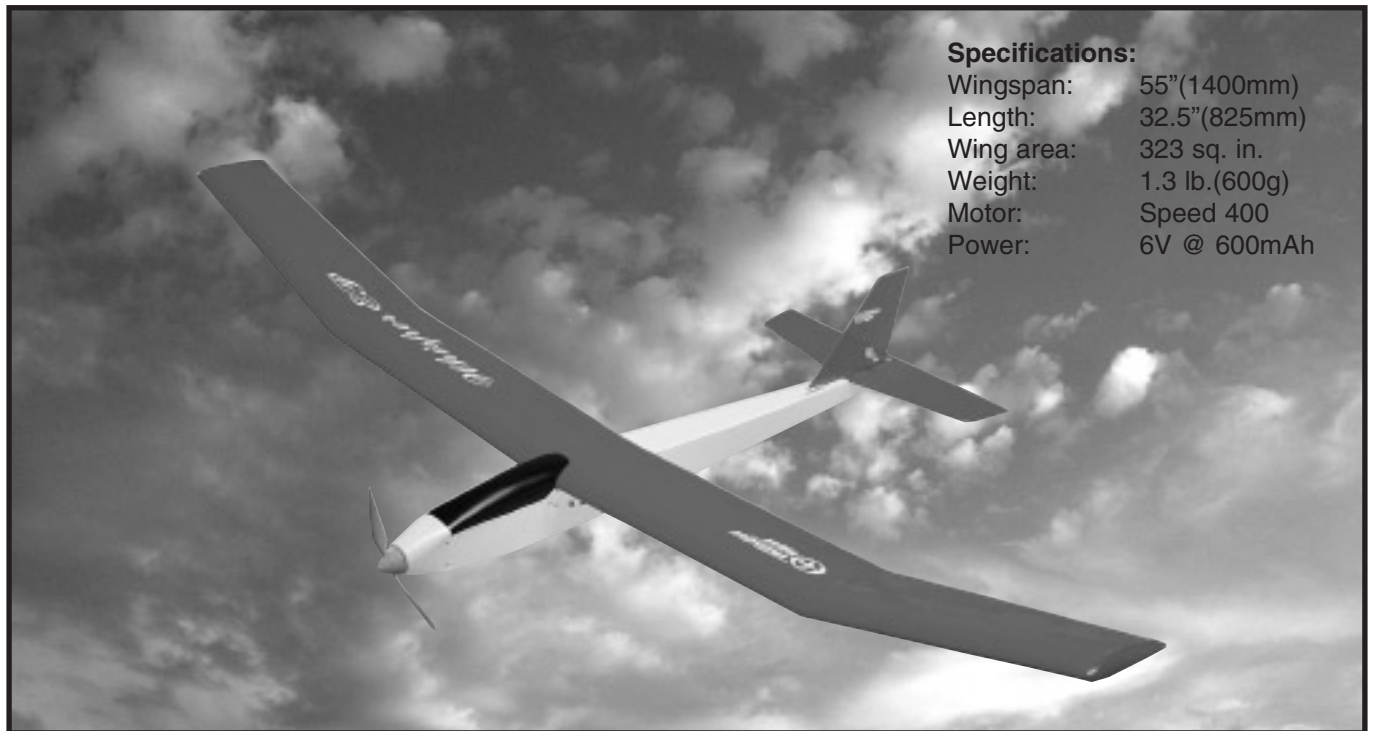


Whisper 1400 EP

Operation Manual

**Specifications:**

Wingspan:	55"(1400mm)
Length:	32.5"(825mm)
Wing area:	323 sq. in.
Weight:	1.3 lb.(600g)
Motor:	Speed 400
Power:	6V @ 600mAh

Ace R/C Whisper 1400 Electric Powered R/C Sailplane (4303-F)

Distributed by Ace Hobby Distributors, Inc. • 116 W 19th ST, Higginsville, MO 64037
Phone: 660-584-7121 • www.acehobby.com • E-mail: acehobby@ctcis.net

Warranty

This kit is guaranteed to be free from defects in material and workmanship at the date of purchase. It does not cover any damage caused by use or modification. The warranty does not extend beyond the product itself and is limited only to the original cost of the kit.

By the act of building this user-assembled kit, the user accepts all resulting liability for damage caused by the final product. If the buyer is not prepared to accept this liability, it can be returned new and unused to the place of purchase for a refund.

Notice: Adult Supervision Required

This is not a toy. Assembly and flying of this product requires adult supervision.

Read through this book completely and become familiar with the assembly and flight of this airplane. Inspect all parts for completeness and damage. If you encounter any problems, call 660-584-6724 for help.



Modeling Organizations

The Whisper is a serious radio-controlled model airplane and you should obtain airplane check-out and flight training from an experience pilot to insure maximum enjoyment and success from the R/C experience. There are thousands of clubs in the U.S. that have training programs and are very willing to help. Also, it is recommended that you join one of the following organizations. They can help you find a club in your area plus offer insurance programs to protect you.

Academy of Model Aeronautics

5151 East Memorial Dr.
Muncie, IN 47302
800-435-9262
Fax 765-741-0057
www.modelaircraft.org

Sport Flyers of America

POB 7993
Haledon, NJ 07508
800-745-3597
Fax 973-305-6686
www.modelaviation.com

I. PRE-ASSEMBLY

Unpacking and parts check:

Carefully unpack the contents of your kit and check it against Fig. 1 for completeness. If any parts are missing or damaged, customers in USA may call 660-584-6724 for help.

Needed for assembly

You will need the following tools and materials to complete your whisper:

- 5-Min. Epoxy
- Modeling Knife
- Small Phillips Screwdriver


 





Figure 1. Contents

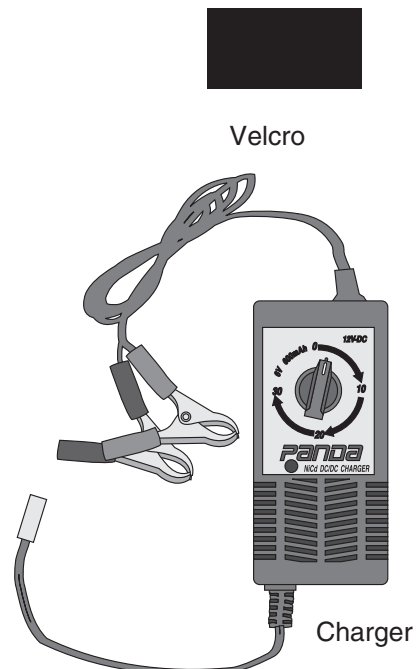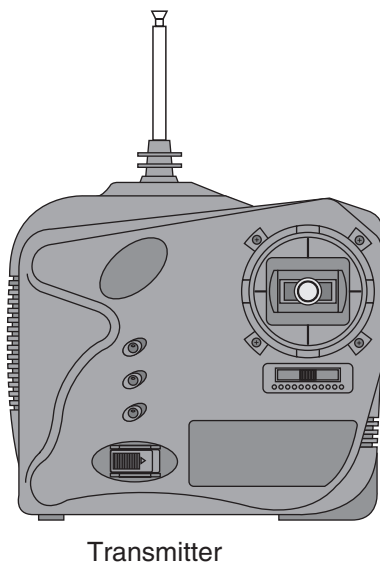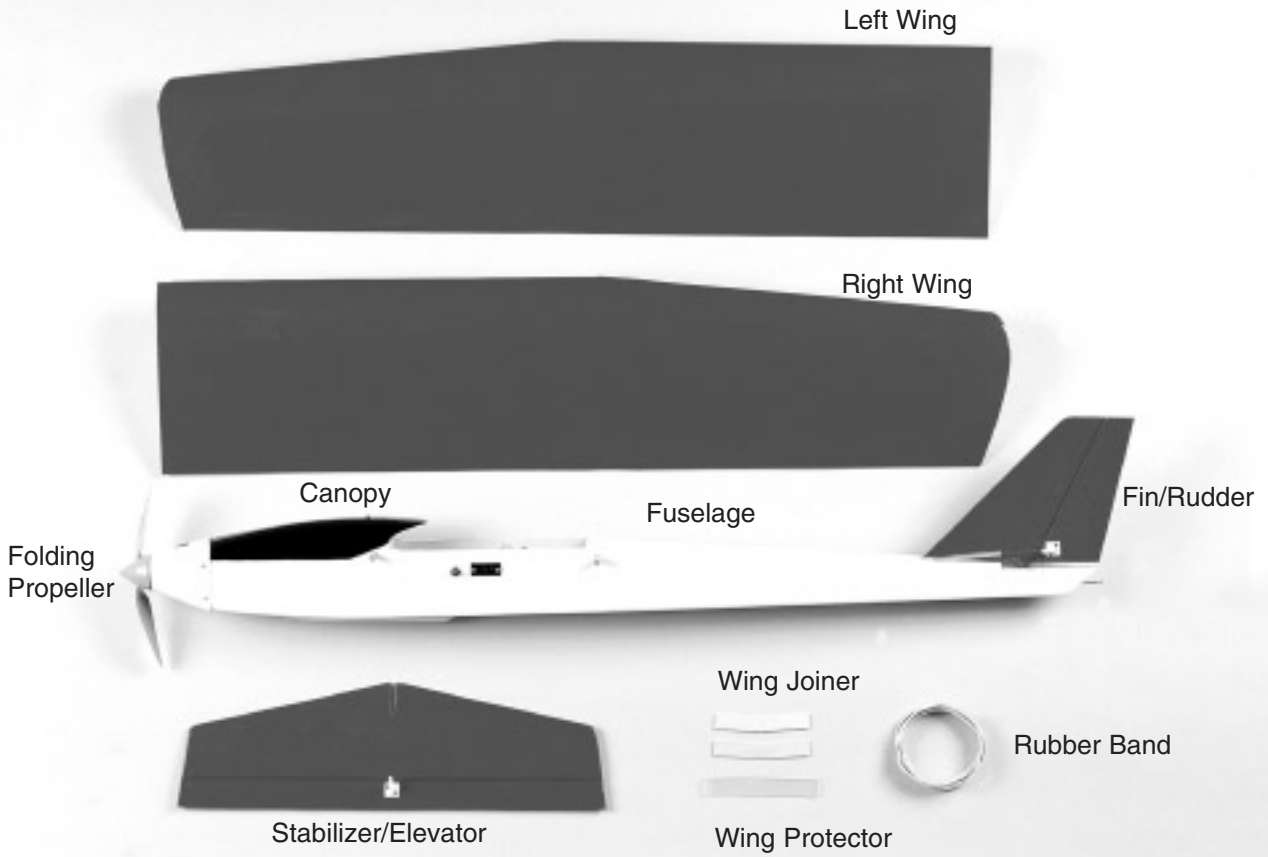

II. Assembly

Follow the assembly steps. We have illustrated each step and provided text to explain the process.


Main Wing Assembly

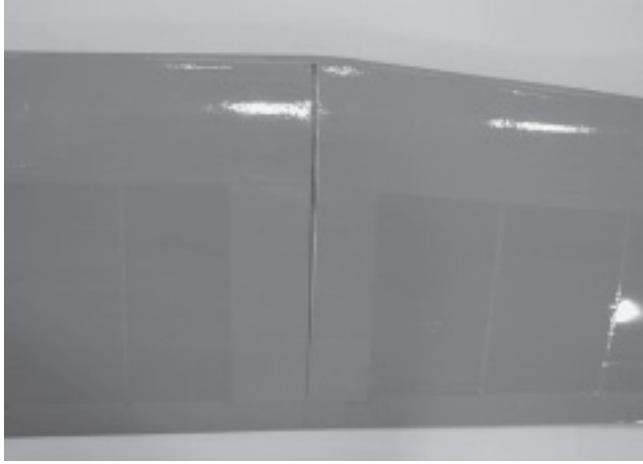

1. Note that each wing panel is actually two pieces with an inner section and a tip section. These two sections for each wing panel are joined as follows. On the top of the wing, carefully cut the covering away from between the ribs where the inner and the outer panel join. Also remove the small balsa wedge in-between the ribs. Put a light coat of 5 min. epoxy in the resulting slot. Bend the outer panel upward so the two ribs meet, forming an angle that is called “dihedral”. Wipe off any excess epoxy and hold in place while the glue sets.




2. Locate two dihedral plywood wing joiners. Glue two wing joiners together with 5-minute Epoxy.

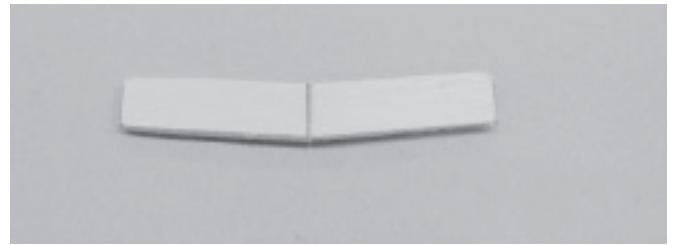

3. After the epoxy has cured, draw a center line on the wing joiner.



 
4. Before gluing the two wing halves, dry-fit the wing joiner into the slots in both the right and the left inner wing halves. Sand if needed for good fit. (Note: the wing is supposed to be joined at an angle; this angle is called dihedral.) When satisfied, apply a thin coat of epoxy on all sides of only one half of the wing joiner (see drawing). Insert the glued half of the wing joiner into the slot in the left wing panel, stopping at the center line.




Make sure you wipe off any excess epoxy with a paper towel. Let cure.



5. Lightly coat epoxy on all sides of the other half of the wing joiner (exposed part) and the exposed balsa inner edges of both wing panels (called the wing root). Slide the wing halves together, ensuring that they are accurately aligned. Firmly press the halves together and wipe off any excess epoxy. Let the epoxy cure while holding the wing together in proper alignment.

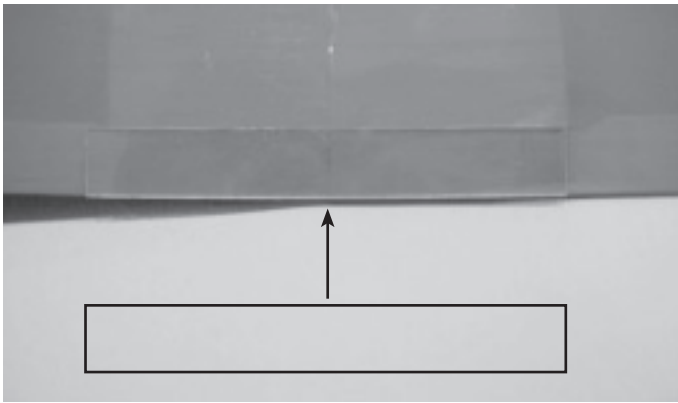

6. Attach the plastic wing protector onto the center of the top of the wing, flush with the rear edge (trailing edge). Use either epoxy or thin double sided tape to hold it in place.

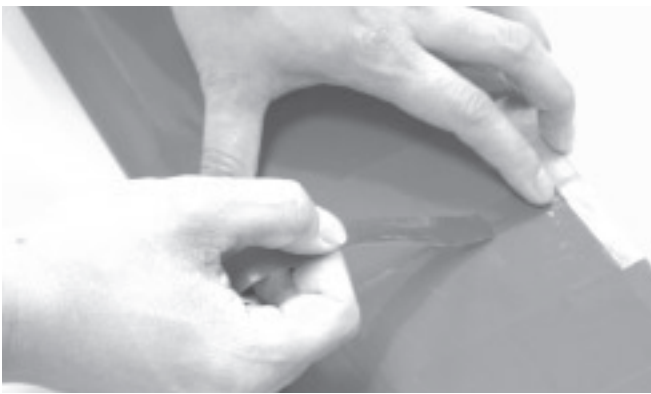


7. Find the decal sheet and cut off a strip of material where indicated. Dress up the three wing joints by covering them with this material.



TAIL ASSEMBLY



1. Trial fit the stabilizer in place on the fuselage. Center it on the fuselage; the elevator control horn should be aligned with the centerline of the fuselage. Use a felt-tip pen to trace where the fuselage sides meet the bottom of the stabilizer.

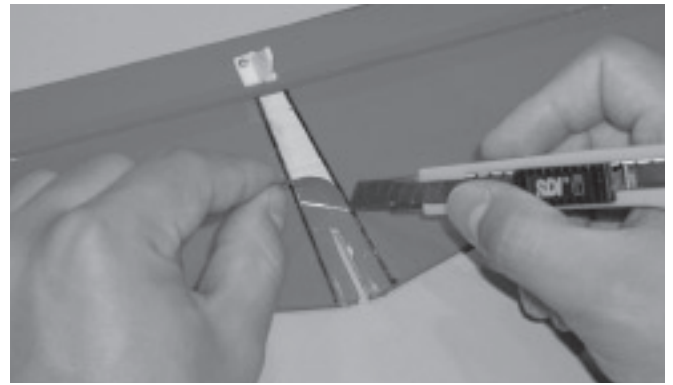

2. Remove the tail and VERY carefully use a sharp hobby knife to cut the covering on the bottom of the stabilizer about 1/16" on the INSIDE of the lines you just traced onto the tail. Just score the covering film. DO NOT cut into the wood or you will weaken the structure. Carefully peel away the covering material in this area.

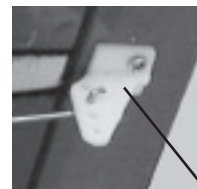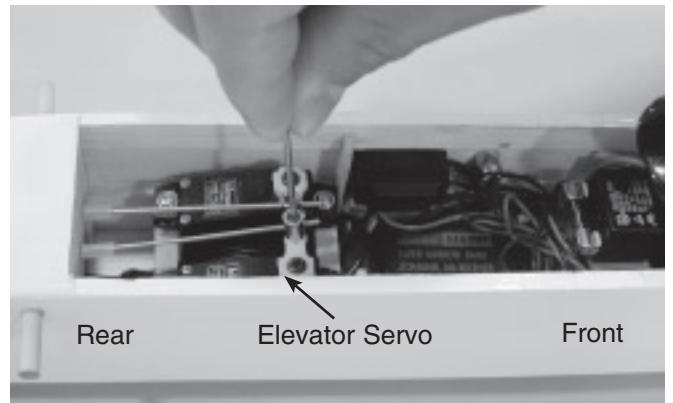



Second Hole

3. Inside the fuselage's wing compartment, loosen the hex screw that secures the elevator pushrod on the elevator servo horn. Pull this pushrod completely out of the fuselage. Insert the "Z" bent end of the




pushrod into the second hole of the elevator control horn. Then replace the pushrod in the rear of the fuselage, sliding the assembly forward until the stabilizer is properly positioned. MAKE SURE you insert the pushrod into its connector on the elevator servo horn as you move

the tail into position. Use 5 min. epoxy to glue the stabilizer in place. It is important to keep the stabilizer level in regards to the fuselage and the fin perpendicular to the stabilizer while the glue cures. Also, make sure the elevator pushrod had stayed inserted into its connector on the elevator servo horn.

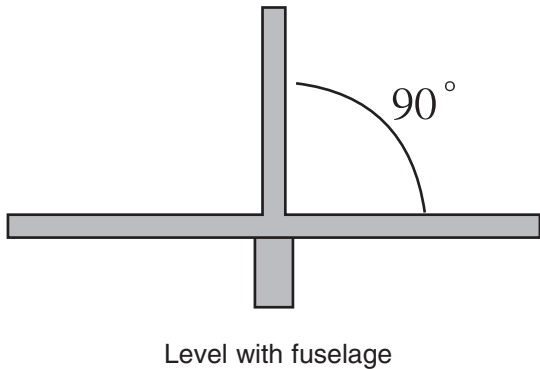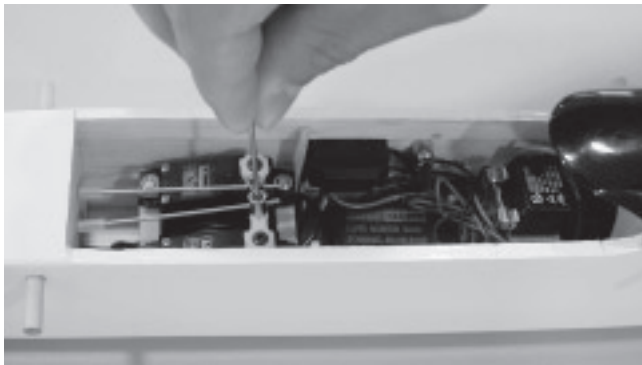

4. IMPORTANT: Before flying you must turn the radio on (with receiver battery charged and transmitter batteries installed) and check that the elevator and rudder are in the neutral position with the transmitter stick and trims in neutral. Securely tighten the hex screw on the elevator pushrod connector on the elevator servo horn. Also, adjust the rudder pushrod if needed.

Figure 2. Charge the Batteries

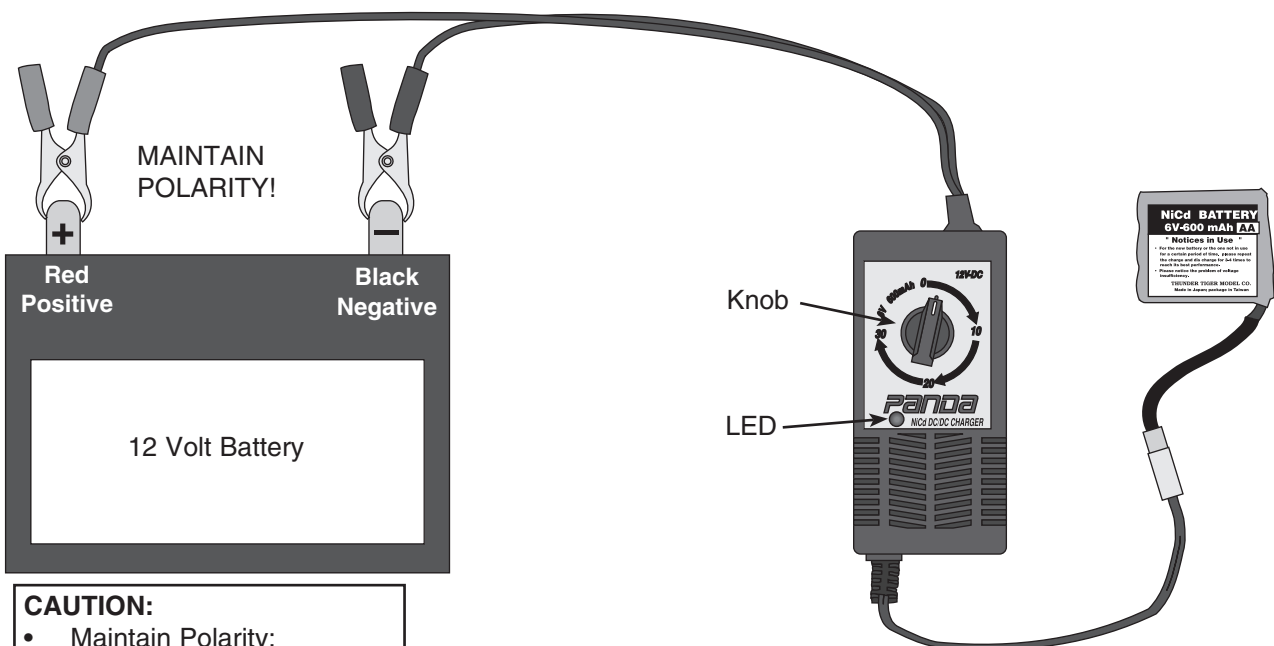


CAUTION:

- Maintain Polarity; Red to + (positive) Black to - (negative)
- Do not leave the battery unattended while charging
- If battery pack gets hot, disconnect and use


1. Hookup as shown
2. Turn charger knob to 30
3. Make sure LED lights
4. Wait until charger clicks off (30 min.)

Figure 3. Battery Installation

1. Remove the canopy

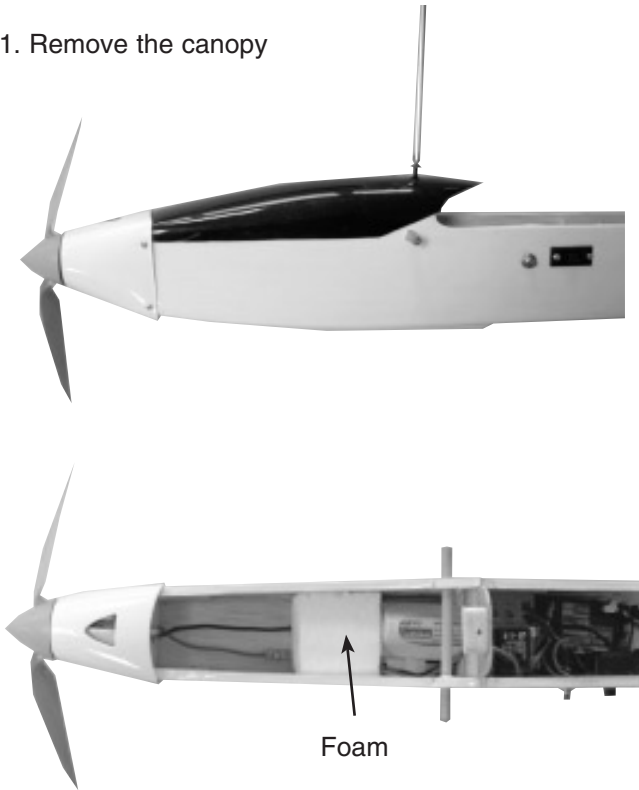

2. Remove the Foam, Plug in the Battery, then place the Battery through the Bulkhead and secure it with velcro.

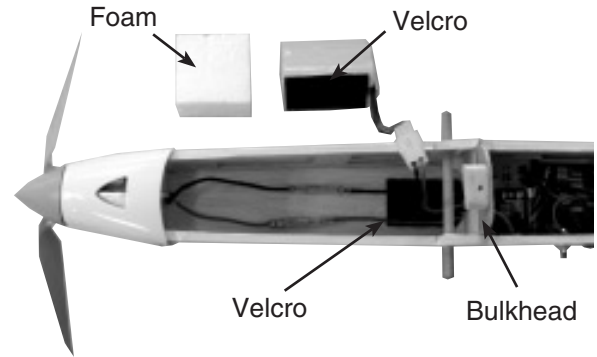

3. Place the Foam in front of Battery. Re-install the canopy. You are ready to fly.

Figure 4. Check Balance


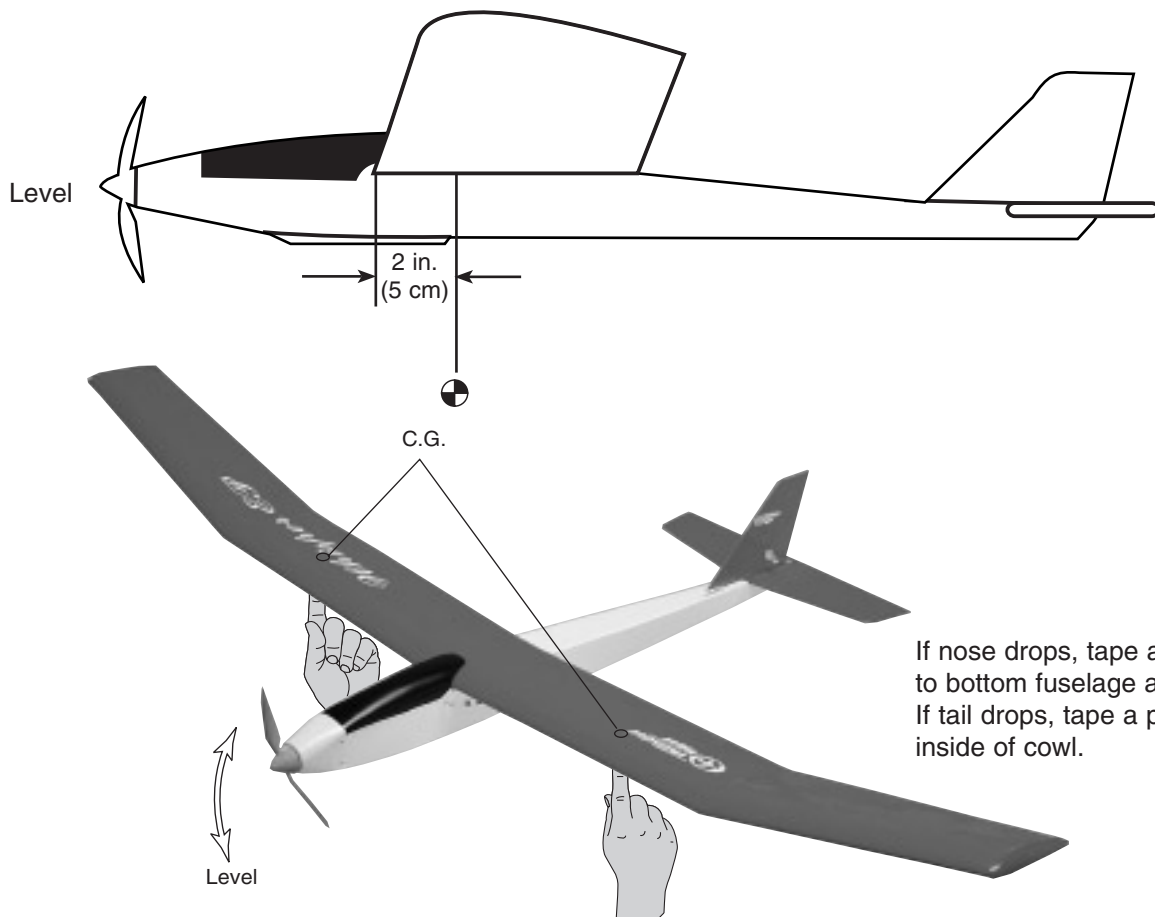


Figure 5. Airborne Radio Components

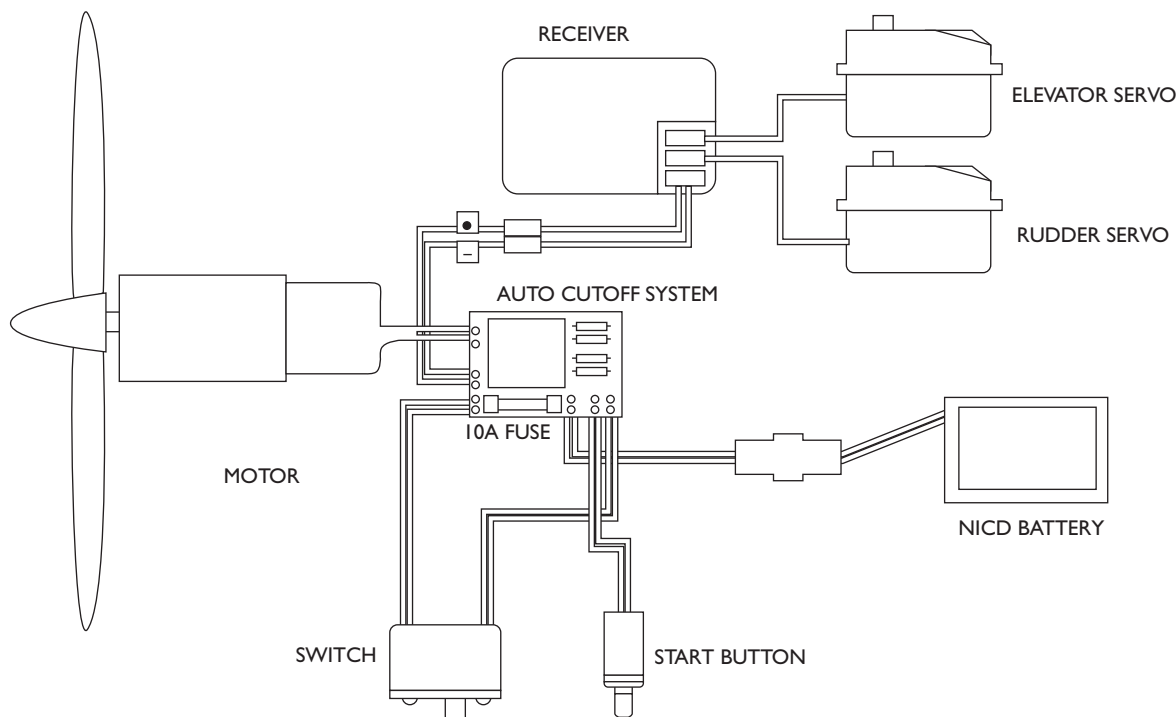

III. OPERATIONAL CHECK

1. Install eight AA batteries in the transmitter, referring to the radio system's instruction manual.
2. Review Fig. 5 to become familiar with your airborne radio components. Following are descriptions of these components.

Auto Cut-off: This device cuts-off power to the motor unit when the battery's voltage starts to drop. This allows the battery to continue to power the radio for several minutes after the motor quits. There is a 10 amp fuse which protects the system from overload.

Receiver: Receives the radio commands from the transmitter and sends them to the Servos which converts the command to motion which, in turn, moves the rudder or elevator.

Power Switch: Turns the power on to the whole system.

Start Button: When pushed, this button starts the motor unit running. The motor will run until either the Power Switch is turned off or the Auto Cut-off device cuts off power to the motor.

NiCd Battery: Rechargeable battery pack that provides power to the motor unit and the radio system.


Motor Unit: Contains a DC electric motor and a propeller that provides the thrust for the airplane.

3. Turn the transmitter on and then the receiver. Refer to Fig. 6.
Move the stick right and make sure rudder moves to the right.
Move the stick left and make sure the rudder moves left.
Move the stick upward and make sure the elevator moves down.
Move the stick downward and make sure the elevator moves up.
Also check for the proper amount of throw and make sure the rudder and elevator are in neutral when the stick and the trim levers are in the center.
4. Hang on to the airplane and press the Start Button. The motor unit should come on. Make sure the propeller is trying to pull the airplane forward. Stop the motor by turning off the power switch.
You are now ready to go flying!


Figure 6. Check the Radio

THE DIRECTION OF MOVEMENT (RUDDER AND ELEVATOR)

NEUTRAL


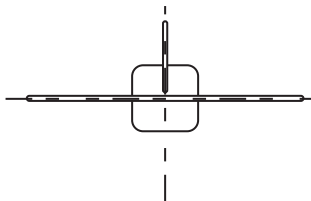


Check the position of rudder and elevator (if these are in neutral).

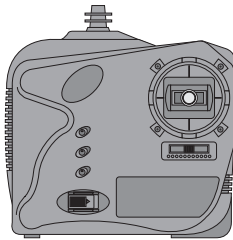



Set the trim in neutral position.
Set the sticks in neutral position

RIGHT TURN

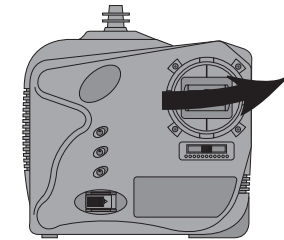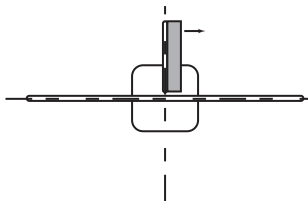



Move the stick to the right.

LEFT TURN

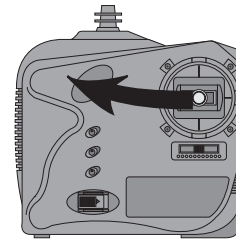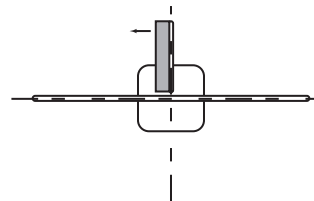



Move the stick to the left.

DOWN

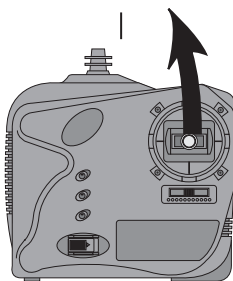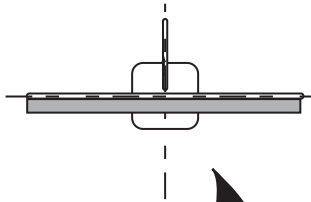



Move the stick up.

UP

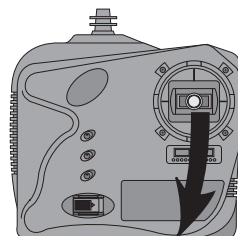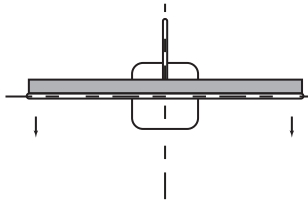


Move the stick down.

RIGHT AND UP

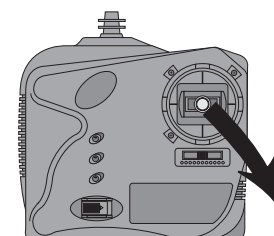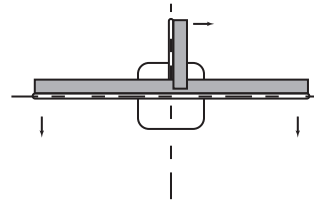

Move the stick down and right.

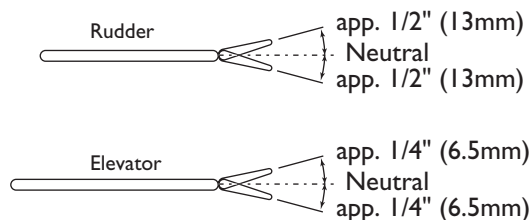

IV. FLYING

You should have a flight instructor teach you how to fly the Whisper. Like a real airplane, you must have an understanding of how to fly the model before launch, or you will probably not be successful. Check at your hobby shop or call the AMA (in the front of this book) for flying clubs in your area.

I. Pre-Flight Checklist

Choose a calm day for your first flights. Never fly in winds over 10 mph. Also, choose an open field with no obstacles or people.

Charge the receiver battery.

Make sure there are no other pilots operating on the same channel (frequency) as you are. If you turn your radio on while he is flying, you will cause him to crash.

Check your radio for good range (50 ft. with the antenna collapsed) and proper operation.

2. Take-off

A proper hand-launch of the airplane is necessary for flight. It must be launched into the wind with a firm toss. The airplane must be tossed level or even pointed a little down. It should never be thrown upward, or it will stall and crash.

3. Flight

Steer very gently right and left to keep the wings level. Let the airplane climb out gradually and gently until it reaches a comfortable cruise altitude at full flight speed. Always keep the airplane upwind of yourself and within a reasonable distance so you can see what it is doing. Remember, when the plane is coming toward you, when you move the stick to the right, the airplane will go to the left from your point of view. This is the hardest thing to learn. Initially, you can keep your body pointed in the same direction as the airplane and look over your shoulder. That helps.

Usually, only small stick movements are required. Try to keep your flying smooth. You can turn the plane by bumping small amounts of rudder and then return to neutral. Use the elevator to keep the airplane at the desired altitude. After awhile, coordinate your turns with the elevator; i.e., bank the plane with a little bit of rudder, then feed in some up elevator to maintain the turn at the same altitude.

If the plane tends to turn one way or the other use the trim lever on the control stick to neutralize the flight. Same thing applies if the plane wants to climb or dive.


You can expect 3-4 minutes of "power-on" flight. You should always maintain enough altitude so you can set up a landing approach when the auto-cut off device turns the motor off and you begin the glide.

4. Landing

When the motor cuts-off, set up your landing approach. Always try to land INTO THE WIND. Keep your turns gradual and only use elevator to maintain a gradual glide. Since the motor is off, you can no longer climb and the plane slows down. If you feed in too much up elevator, the plane will stall and may crash.

Just before touchdown, "flare" the plane by adding up elevator. The plane should slow down even more and come in for a gentle landing. Don't add too much elevator, too soon!

Walk over to the plane and turn off the switch on the plane, then the transmitter switch. Remove the batteries and let them cool off before charging up again. Check over the plane to make sure nothing loosened up or broken.

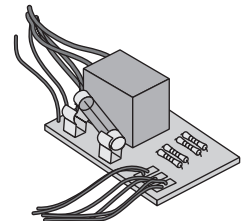

V. IN CASE OF TROUBLE

If your motor does not run when the start button is pushed, make sure the 10 Amp fuse on the Auto-Cutoff device is OK and that the batteries are properly charged.

If the radio is erratic (glitches), check that the transmitter and receiver antennas are extended to their full length. Make sure the transmitter batteries are fresh. Make sure no one else is operating on your channel (frequency) in the immediate vicinity.

If the plane does not fly properly, make sure you are being gentle with the control inputs. Make sure the plane is balanced properly (Fig. 4). Make sure all the wing and tail surfaces are flat, true, and properly attached and aligned.


If your trouble persists, call 660-584-6724 for technical help.

VI. CONCLUSION

To defeat the laws of gravity and take to the wing is both challenging and thrilling. We hope you enjoy your entry into the fascinating world of R/C flight and make it your hobby for a lifetime. Please let ACE R/C be your chosen brand, no matter what direction you progress.

Figure 7. Flying

Launch firmly into wind straight and level.
Do not throw upwards!

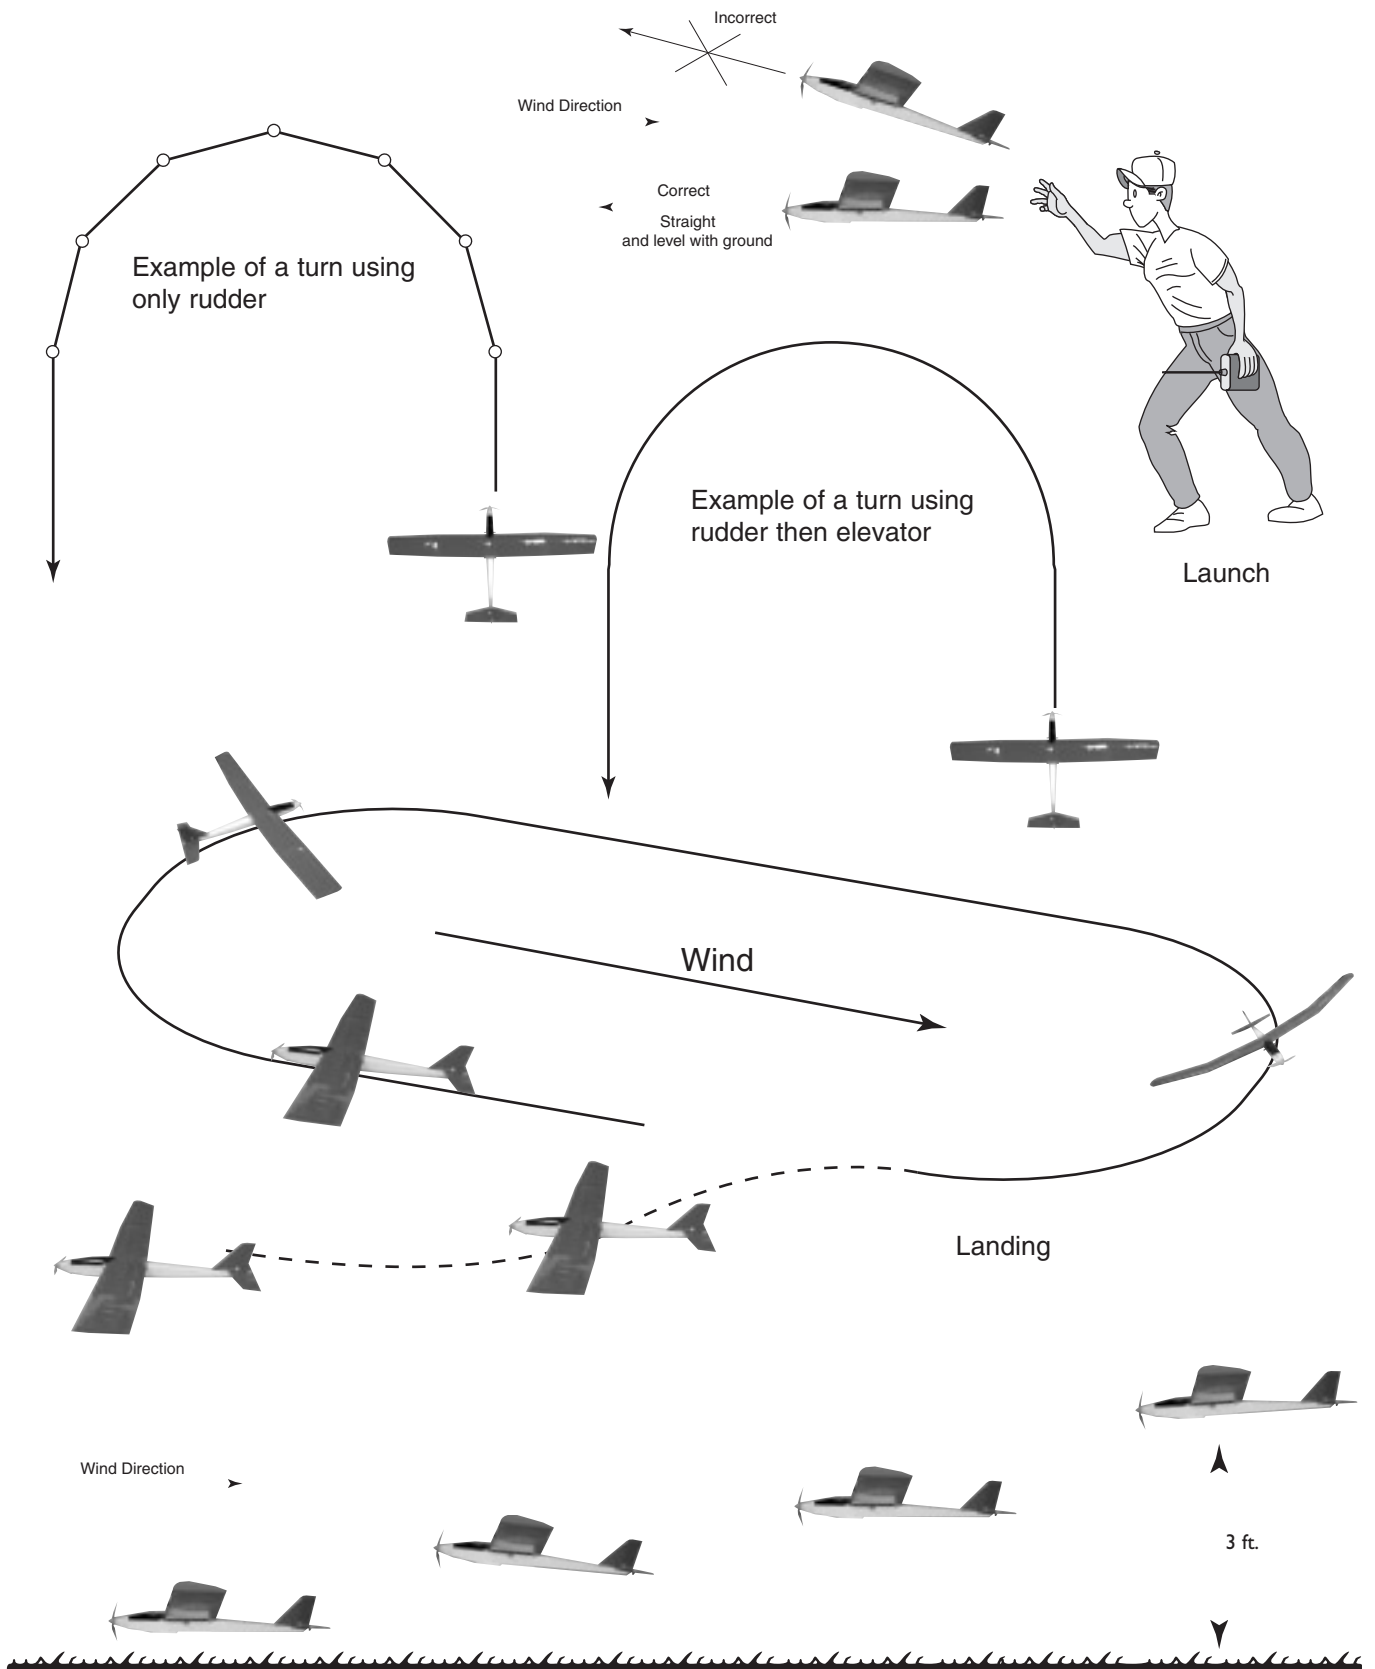

VII. REPLACEMENT PART

Fuselage AS6018

Wing Dowel (2)

Fuselage (1)

Main Wing AS6019

Wing Protector (1)

Left Wing (1)

Right Wing (1)

Wing Joiner(2)

Horizontal Tail AS6020

Stabilizer/Elevator (1)

Vertical Tail AS6021

Vertical Fin/Rudder (1)

Control Horn AS6023

Control Horn(2)

Back Plate(2)

Screw(4)

Pushrod AS6022

Pushrod (2)

Propeller Set AS6026

Blade(2)

Set Screw(2)

Back Plate (1)

Pin(2)

Screw(1)

Spinner(1)

Cowl AS6024

Cowl(1)

Self-Tapping Screw(4)

Canopy AS6025

Canopy (1)

Motor AS6028

Motor(1)

Hardware AS6027

Plastic Nut (2)

Hex Wrench (1)

Rod Connector (2)

Set Screw (2)

6V Battery 2621

Battery(1)

Rubber Band 3169/2

Rubber Band(4)

Decal AS6016 Decal(1)

Auto Cutoff AQ0615

Auto Cutoff(1)

Motor Mount AS6017

Motor Mount(2)

Screw(2)

Self-Tapping Screw(2)